



[Knowledgebase](#) > [Smartwatches](#) > [Reebok Icon Troubleshooting and Information](#) > [Software & Firmware](#) > [Keeping Your Reebok Icon Up to Date](#)

Keeping Your Reebok Icon Up to Date

Inas Laghzaoui - 2025-08-20 - [Comments \(0\)](#) - [Software & Firmware](#)

The Reebok Icon receives regular software updates to improve performance, add features, and fix bugs. Updates are delivered through the **Reebok Connect app** on your smartphone.

How It Works:

- Whenever a new update is released, the Reebok Connect app will notify you.
- Ensure your phone has an active **Wi-Fi or mobile data connection** to download the update.
- Keep your watch nearby and paired via **Bluetooth** during the update process.

Why Updates Are Important:

- Improve device stability and battery performance.
- Add new watch faces, features, or health tracking enhancements.
- Fix known issues to ensure optimal operation.

Tips for a Smooth Update:

- Make sure your watch has sufficient battery before starting an update.
- Keep your watch and phone close together until the update completes.
- Follow all prompts in the Reebok Connect app to ensure the update installs correctly.

Disclaimer:

Software updates are released at our discretion. Availability may vary depending on your device model and region.